


3DMAKERPRO

store.3dmakerpro.com



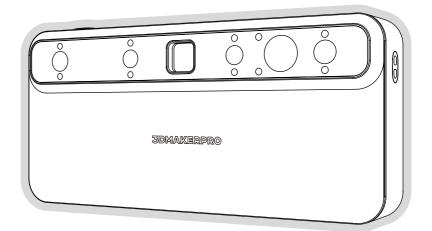

TOUCAN 3D Scanner

3DMAKERPRO

- **♣** @3DMakerProCares
- (ii) @official3DMakerPro
- @3DMakerPro
- https://store.3dmakerpro.com/
- service@3dmakerpro.com

JimuMeta

- **∮** @JimuMeta
- @JimuMeta
- fig. https://www.jimumeta.com/
- service@jimumeta.com



Software


JMStudio

Supported OS

Windows | MAC

Android | iOS


P1 PACKING LIST

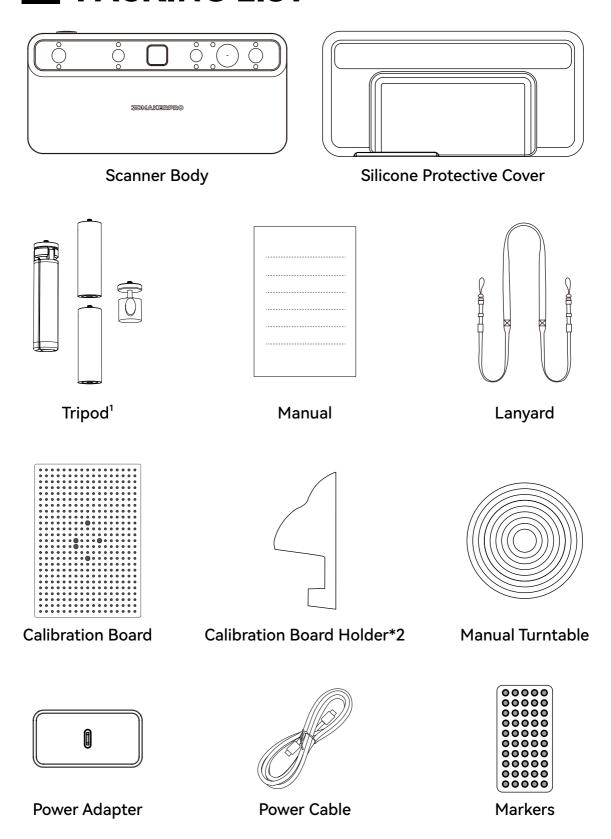

- * ¹Not inclouded in the Standard Combo.
- * Product images are for illustrative purposes only! The actual product may vary.


P2 Scanner Components

Camera Control Button (Photos can be manually taken in fixed point scanning mode.) Power Button (Click once to turn it on; long-press for 6s to turn it off.) Charging Port Power Button (Click once to turn it off.)

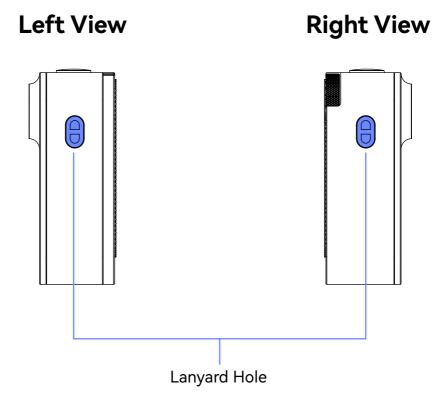


Front View

Back View

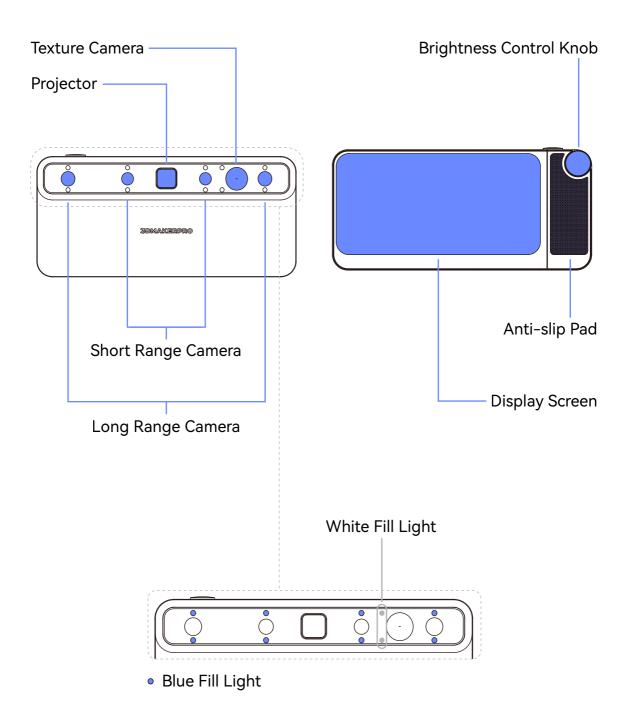

P4 Hardware Assembly

Follow the image below to assemble the tripod when scanning in fixed point mode.

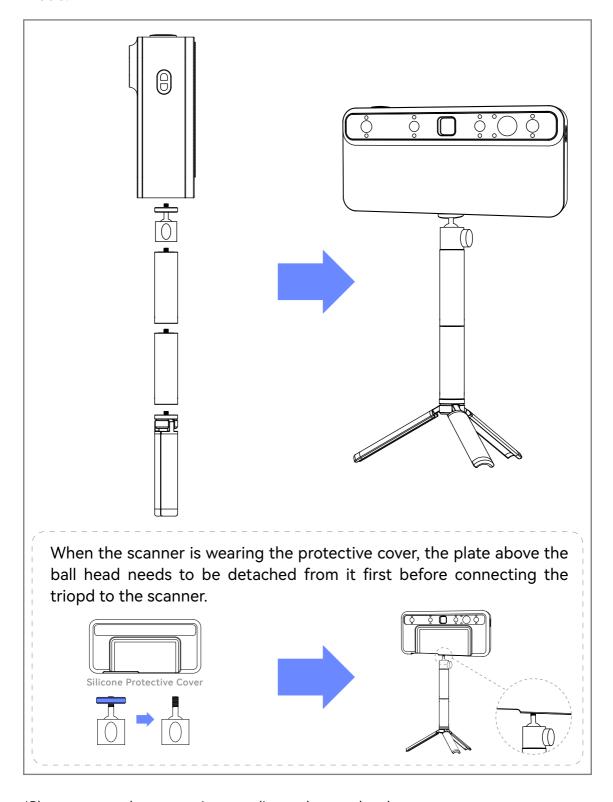


^{*}Please connect the accessories according to the actual use!



When doing handheld scanning, it is recommended to attach the lanyard to the scanner in case it drops and gets damaged.

*The images below only display one side. Both sides of scanner should be attached to the lanyard.

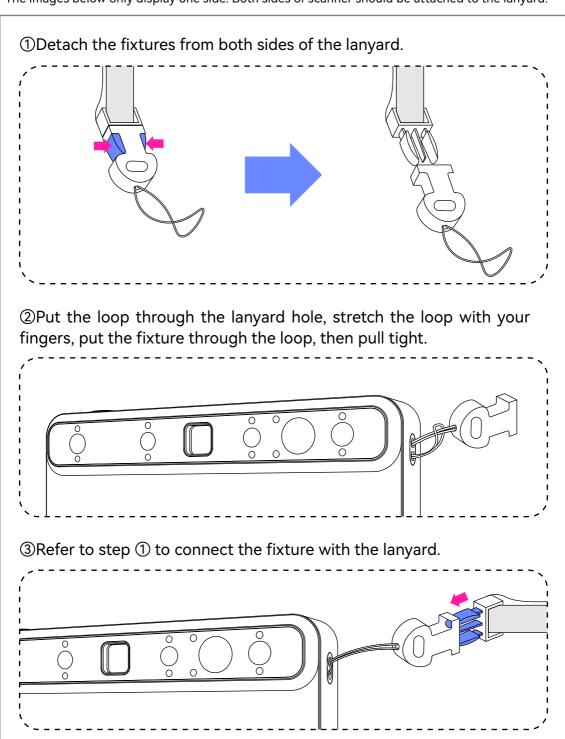


P6 Homepage

1 Press the button at the bottom of the device to turn it on.




② On the homepage, you can create new projects, view the project list, and more. Scroll down to open the control center.

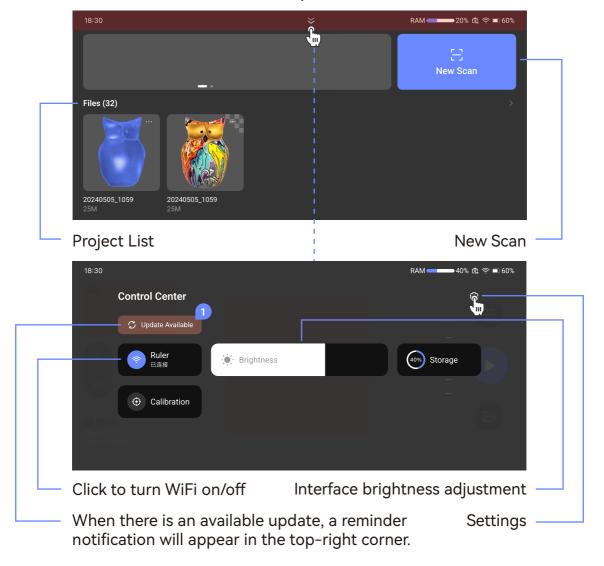


P7 Settings

Software Update

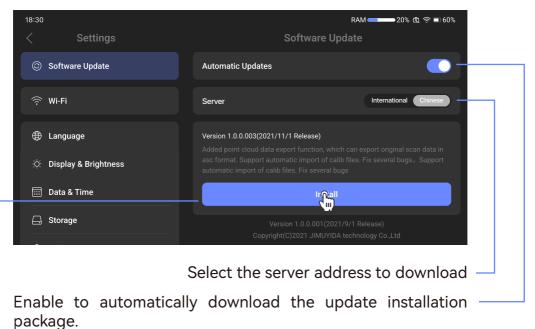


Tap 'Install' to install the downloaded installation package. The system will automatically restart after completing installation.

WiFi

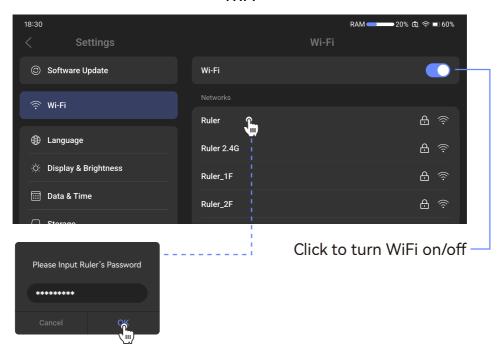


*When transferring data to a PC, TOUCAN and the PC need to be connected to the same Wifi network.


Language

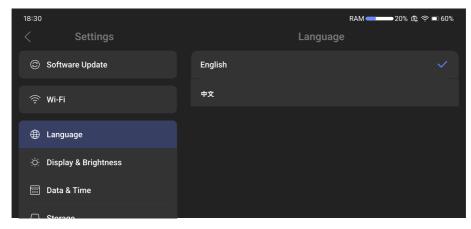

Display & Brightness

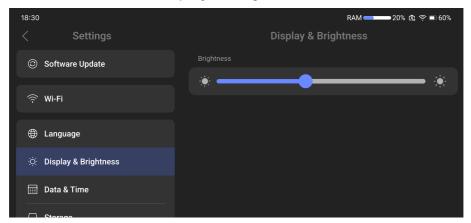

Date & Time

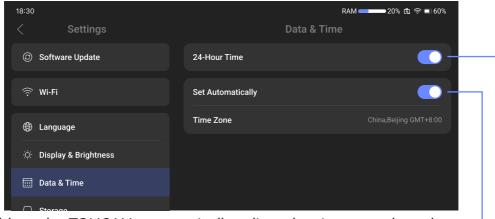


Enable to let TOUCAN automatically adjust the time zone based on the current location; Once it's disabled, you need to select it manually.

Enable to let TOUCAN use a 24-hour format for the time shown in the menu bar; Once it's disabled, it'll use a 24-hour format.




Storage

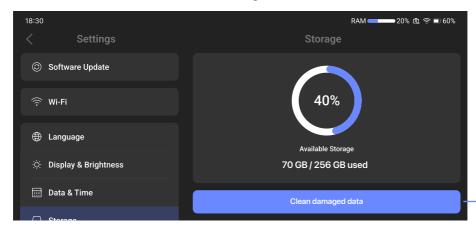

Clear invalid data


Calibration

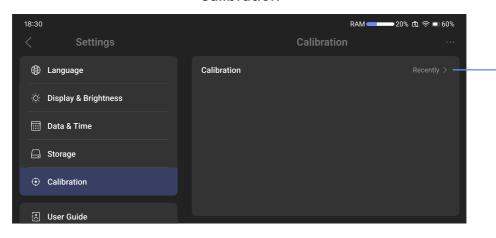

Recalibrate the equipment




User Guide

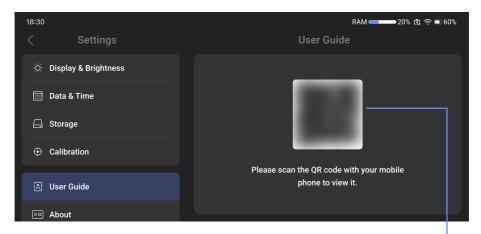


Scan the QR code to view the latest operating manual.

About

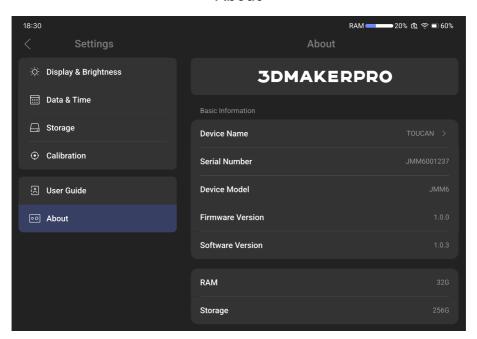

P11 Preparation before scanning

Adjust the scan settings in the scan preview interface

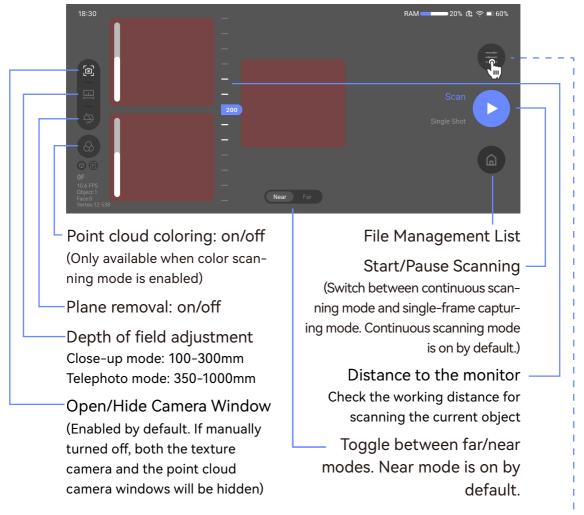


SLAM mode: for specific usage scenarios, please refer to the manual about SLAM mode.


Enable to collect the model's color information and show the texture camera window during scanning.

Dark option is preferred if the scanned object is in dark color.

Power mode switch, this mode will enable high-power Class 3R laser:

- The laser beam is dangerous if viewed directly, may cause permanent eye injury within a short exposure
- Do not point the scanner at people or reflective surfaces
- Recommended for professional / controlled environments only

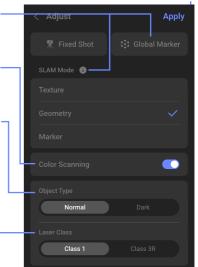

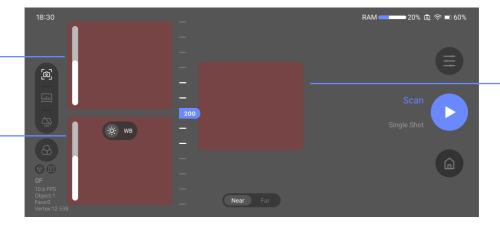

Texture camera, used to capture texture images of the model, displaying the model's original colors. The texture images will be used in texture mapping.

You can adjust the brightness with the slider tool on the left side of the window. If it is too dark or overexposed (overexposure is shown in red), it will affect the effect of texture mapping. An example is shown below:








A point cloud camera is mainly used to generate point clouds and for stitching.


Brightness can be adjusted by sliding on the left side of the window or using the knob at the top right of the device. When adjusting the brightness, it is necessary to observe the current point cloud scanning effect. If it is too dark or overexposed, it can result in incomplete or layered point cloud scans (taking too dark as an example). The illustration is as follows:

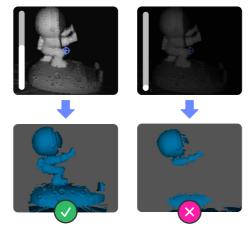

3D viewer, to view the collected point cloud or mesh model



SLAM Mode Description

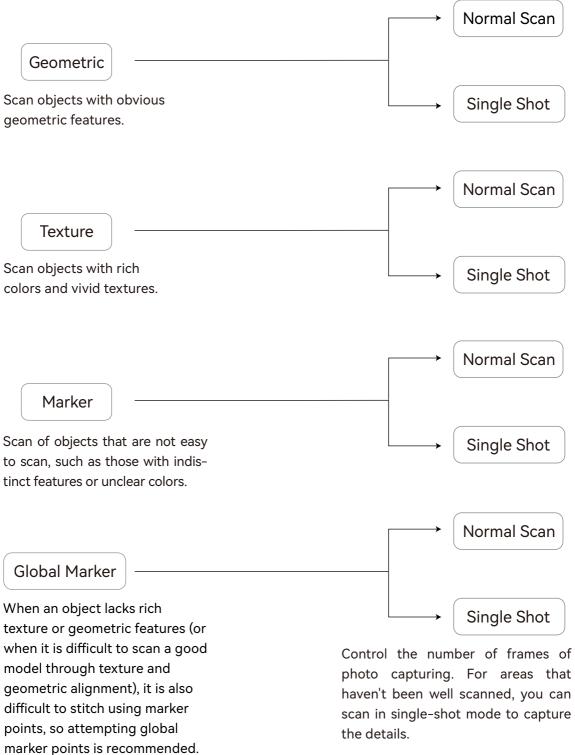


P14 Scan


General SLAM Mode

The general SLAM modes are divided into geometric mode, texture mode, and marker point mode (all of which only require a single scan). All three SLAM modes can use either Nornal Scan or Single Shot; for example, the geometric mode.


Note: The marker point mode requires attaching marker points to the object before scanning to enhance the object's scanning features.

Normal Scan

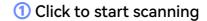

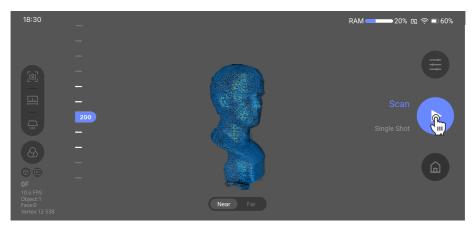


2 After the scan is complete, tap to pause the scan.

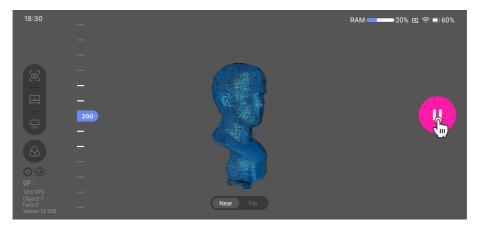



3 You can swipe to rotate or use two fingers to zoom the model to observe the current scan. It supports continuing the scan or rescanning. After the scan is complete, click confirm to automatically perform offline stitching, which will optimize the model as a whole.

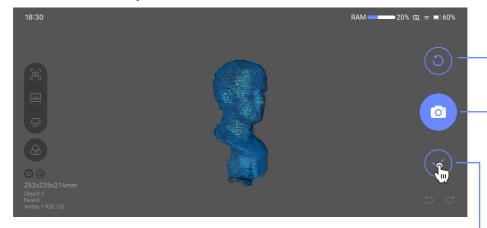

Confirm the current scan results and save

If the scan is incomplete, continue scanning the current object

Clear the data that has been collected and return to preview mode to start collection again.






Point cloud spacing: the larger the data, the more compact the point cloud appears.




Single Shot



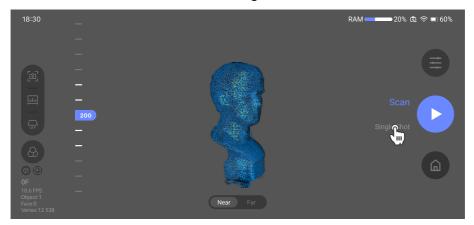


2 Tap the on-screen camera button or the camera button at the top right of the device to take a photo scan of the object. It is recommended to tap the button once every second.

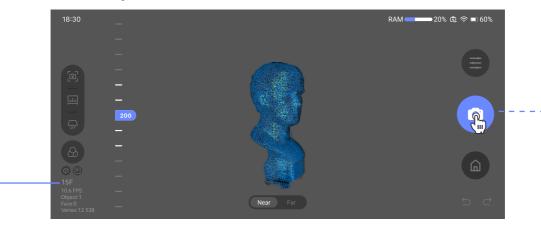

Number of photos taken



3 You can swipe to rotate or use two fingers to zoom the model to observe the current scan. It supports continuing the scan or rescanning. After the scan is complete, click confirm to automatically perform offline stitching, which will optimize the model as a whole.

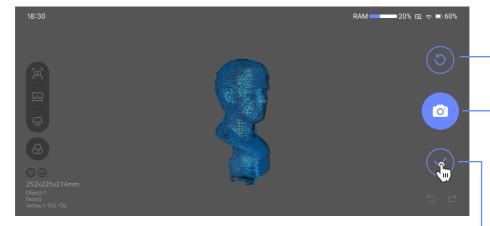

Confirm the current scan results and save

If the scan is incomplete, continue scanning the current object

Clear the data that has been collected and return to preview mode to start collection again.





Point cloud spacing: the larger the data, the more compact the point cloud appears.




Global Marker

Before starting the scan, marker points need to be attached to the surface of the model for the first scan (marker point scan). During this stage, the position information of the marker points on the model will be collected and recorded. After the marker point scan is completed, the model can be scanned. When scanning the model, the marker points collected in the first stage will help align the model data collected during this stage.


Note: 1. When scanning global markers, only continuous scanning mode can be used. 2. When scanning the model, the near and far view cannot be adjusted; the default is to use the distance selected when scanning global markers.

It is recommended that when scanning large objects, a marker point should be placed every 10 cm. For small objects, the spacing can be adjusted according to actual use. During scanning, it is important to ensure that at least 4 points are recognizable within a single frame; the more recognizable marker points there are, the less likely the scan will miss details.

1 Select global marker mode

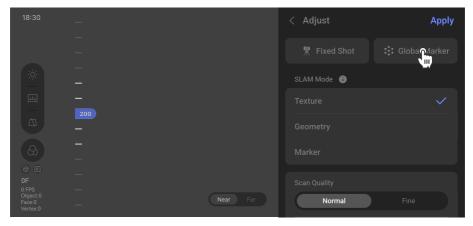


2 Add a new global marker

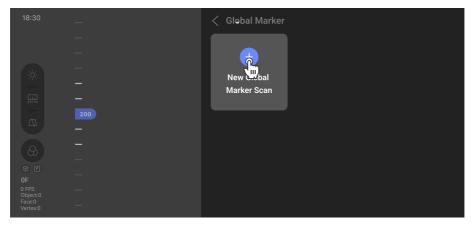




3 Start the first scan (record the marker points)

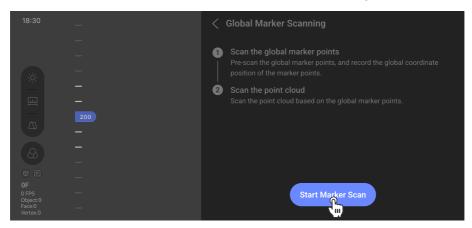

4 Click to start marker point scanning (supports continuous scanning only)

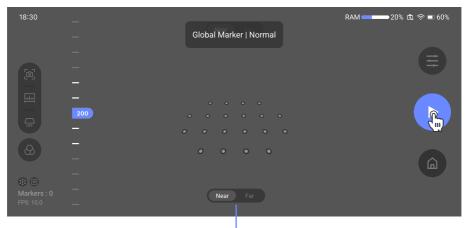


When scanning an object for the second time, the scanning distance from the first scan is used by default and cannot be changed.


(5) After the scan is complete, tap to pause the scan.

Yellow indicates recognized markers, green indicates markers that are currently being recognized, and red indicates lost markers.




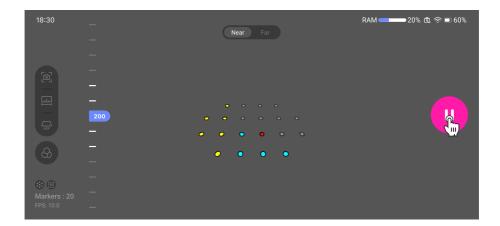

6 You can swipe to rotate or use two fingers to zoom the view to observe the global marker point collection status. It supports continuous scanning or rescanning. If the marker point collection is complete, you can click confirm to proceed to the next step.

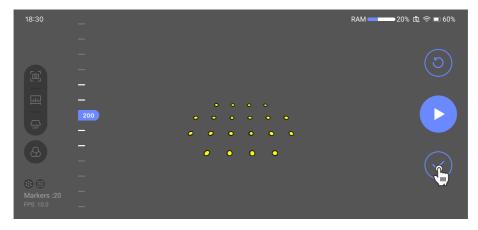


Click to perform a second scan (scan the object)

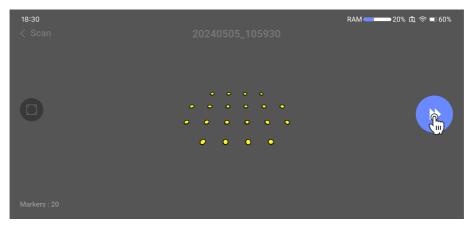



(8) Objects can be scanned according to actual needs, and specific operations can be found in the manual about Normal Scan and Single Shot.

When scanning a model, you cannot switch between long-range and close-up views. The configuration used will default to the one selected during the first marked point scan. To change it, you need to exit the current scanning process and rescan the marked points after setting the scanning parameters.

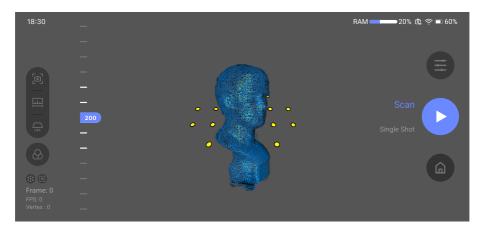

P22 Clipping


Lasso

Clip the data accroding to your needs.

1 Tap to enter the clipping interface




2 Start the data clipping

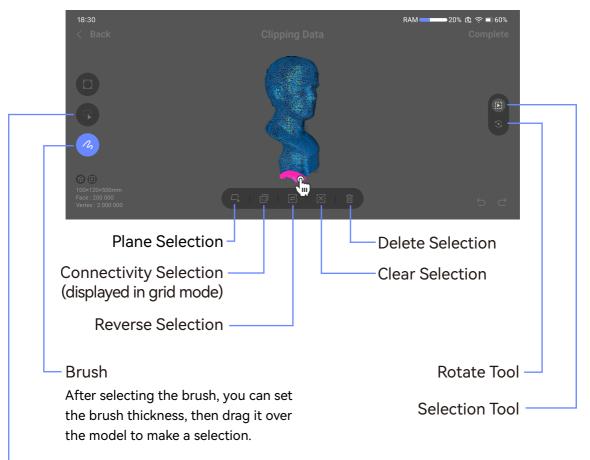




(3) Check the processed data and confirm by clicking 'Complete'; if unsatisfied, you can click 'Back' to not save the current operation.

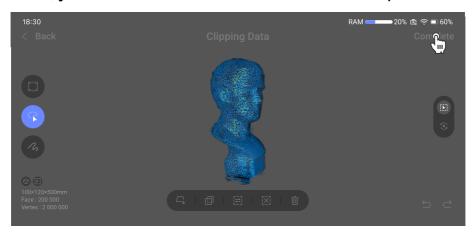


* Plane Selection: Manually select a portion of the data using Brush or Lasso. The plane data corresponding to the selected data is automatically calculated, which can be used to select and delete planar areas such as table surfaces or the ground.

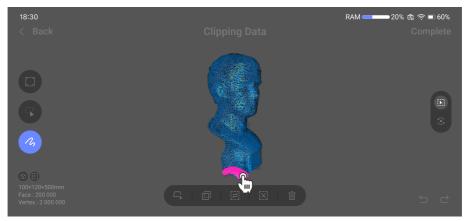






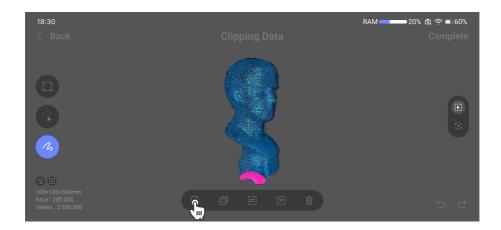



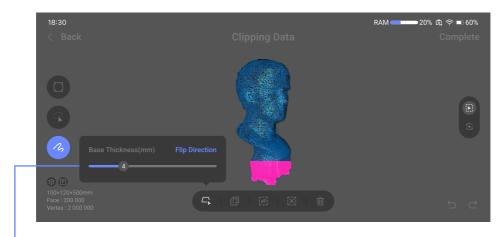


Adjust the thickness of the base

P25 Align


It is possible to scan a model in multiple poses, then align the data from these poses to obtain a more complete model.

1 Enter the alignment interface in file management

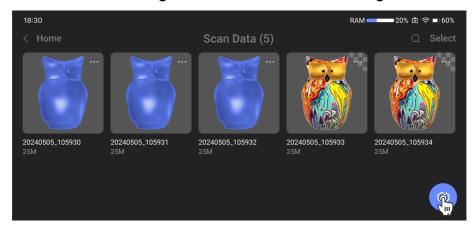


2 Select the data that needs to be aligned and click confirm.

The first selected data will default as the reference alignment object. It is recommended to use the more complete scanned model data as the reference alignment object. The reference alignment object can be modified later in the data list.

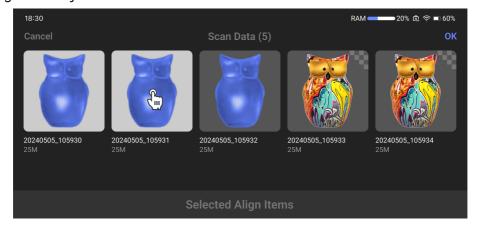




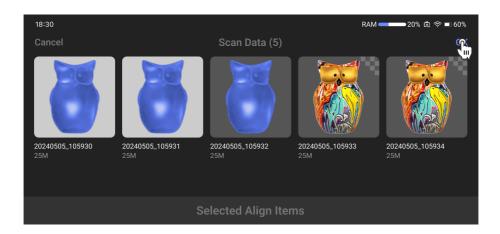

3 Configure alignment parameters according to the requirements, then tap Align.


If the data to be aligned to still has noise before alignment, you can tap the corresponding file to clip out the noise. (Please note that the selected point cloud will turn red and won't be aligned to.) You can also tap the configuration button next to the Align button to configure the alignment parameters.

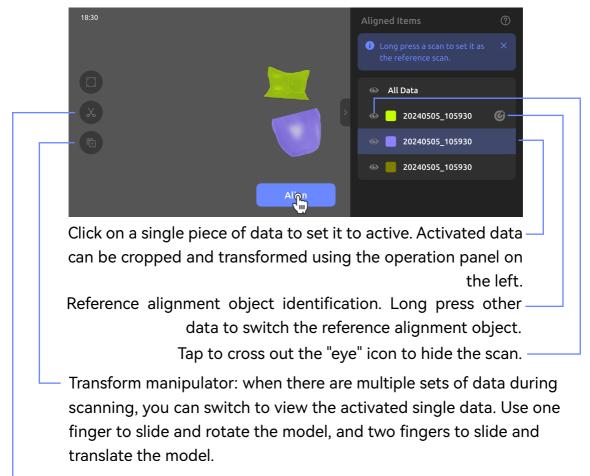

When a single file is selected, the scanned file can be cropped and edited.



4 After configuring the alignment parameters according to your needs, tap "Apply".

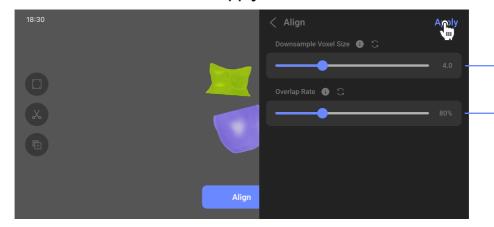

Reduce point cloud data to improve processing efficiency. A larger voxel size increases speed but loses detail, while a smaller voxel size preserves detail but slows down processing.

Determine alignment accuracy. A higher overlap rate provides better accuracy but slower processing speed, while a lower overlap rate in faster processing but reduced accuracy.






(5) View the alignment results, tap "OK" to save the alignment results and generate a new data file; if the alignment is unsatisfactory, you can tap exit.

*If the alignment result is unsatisfactory, you can go back and manually adjust all the scanned data to the same angle before trying the alignment again.



P29 Process

The scanned point cloud data can be denoised to remove redundant noise, and be converted into a mesh with the fusion function. Finally, you can edit the mesh by removing floating parts, repairing gaps, simplifing grids, and excuting texture mapping.

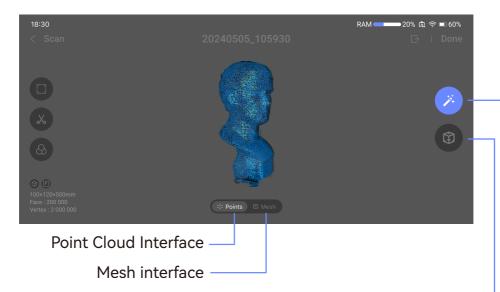

One-Click Processing: The system has 3 built-in processing modes; you only need to select the corresponding mode. (It performs three steps: meshing, removing isolated items, and simplifying. For other operations, you can choose manual processing)

Low-quality processing: fast speed but average results
Standard processing: suitable for most scenarios, relatively fast, good results

High-quality processing: slow speed but excellent results

Manual processing: You can choose the steps you need to handle (for example, whether simplification is required) and configure each processing step in detail.

Statistical Noise Removal —— clean up the isolated points in the cloud.

Fusion —— mesh the point cloud data by connecting the dots to produce a complete model.

Remove Floating Parts —— clean up the mesh by removing the floating noises from the scans. Repair gaps —— fill the holes on the mesh to produce a watertight model.

Simplify —— narrow down the amount of mesh faces to reduce the data size. The higher the processing level, the greater the reduction in quantity.


Mesh Denoising —— smooth the mesh by flattening the surface. The larger thevalue is, the smoother the mesh will be. The higher the processing level, the smoother the mesh.

Texture Mapping —— apply the texture or color information onto the mesh surface.(Colors only available for some of 3DMakerpro models.) Note: The "texture mapping" here refers to applying a texture image to the surface of a model. Texture mapping can only be performed if the ColorScanning data was enabled when scanning the model.




One-click processing


1 Select one-click processing

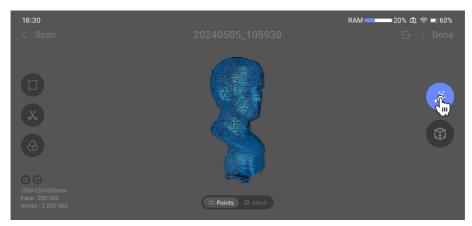

2 Select the processing quality according to actual needs, then tap Apply.

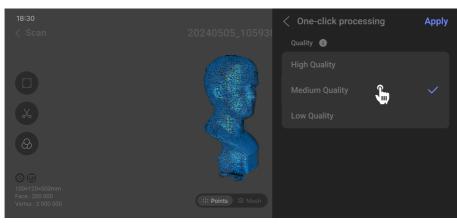




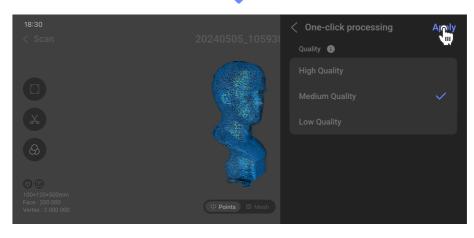





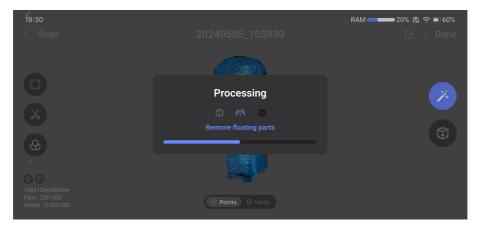


3 After the processing is complete, tap 'Done' to save the project; if the results are not satisfactory, you can process it again.






Manual processing


1 Choose manual processing

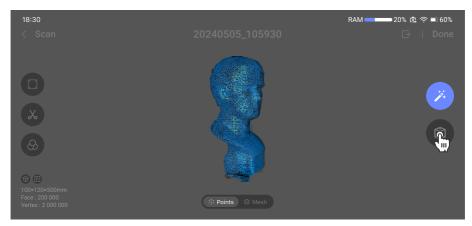


2 Configure the processing workflow according to actual needs, then tap Apply.

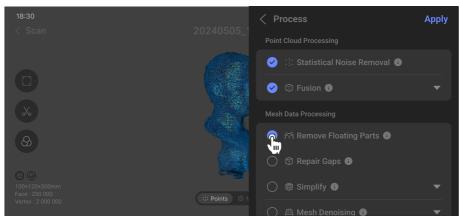



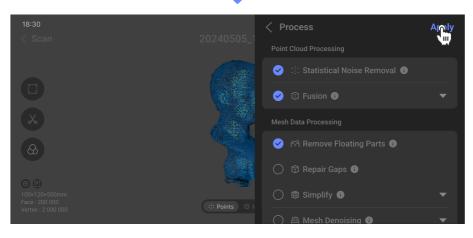



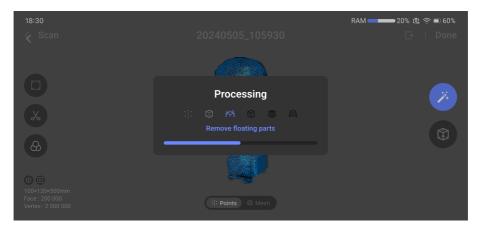


3 After the processing is complete, tap 'Done' to save the project; if the results are not satisfactory, you can process it again.



P34 Project Management

Support exporting, renaming, and deleting files on the project homepage or the project management interface.

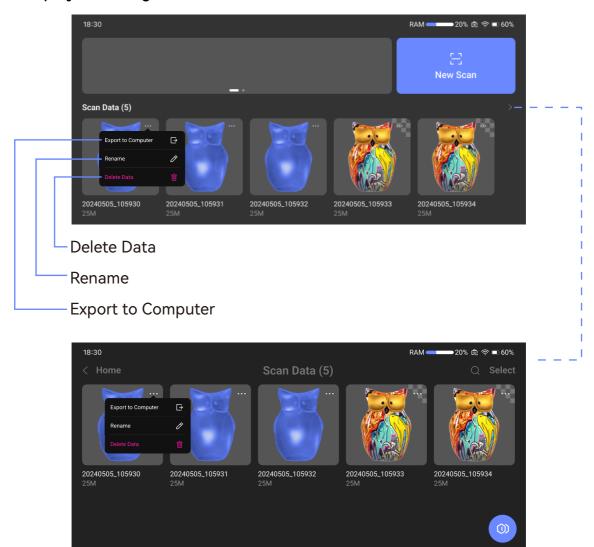



Export


Before exporting, you need to ensure that the device and PC are connected to the same network.

The export function supports exporting a single project (single export) or multiple projects (batch export) at a time. For single exports, you can export from the project's homepage or the processing interface; for batch exports, you need to enter the project list management interface, select the projects to be exported one by one, and then proceed with the export.

Export Method

Single Export

• In the processing interface (point cloud or mesh data), it supports directly exporting the current project

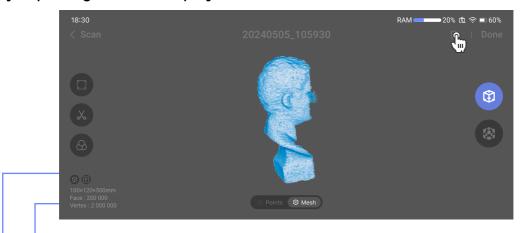


On the homepage, it supports directly exporting a single project





Batch Export


Enter the project management interface, select multiple projects to export, and click Export.

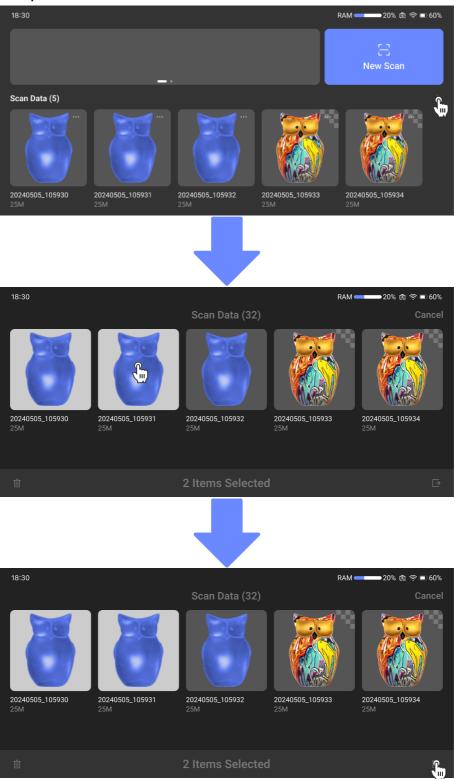




Procedure


① On the PC, click 'File_Import from Mobile' in the 'Menu Bar' at the top of the interface to open the mobile import window. Your computer's IP address will be displayed on the right side of the interface.

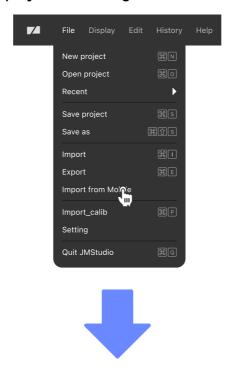

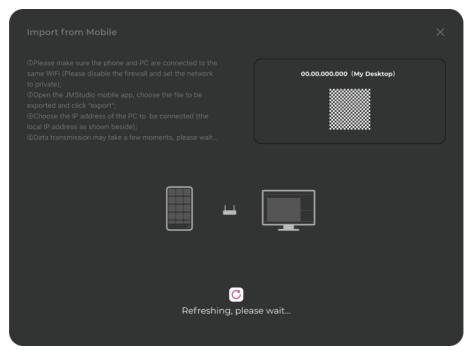




2 Enter the IP address obtained from the PC in your TOUCAN to establish a connection

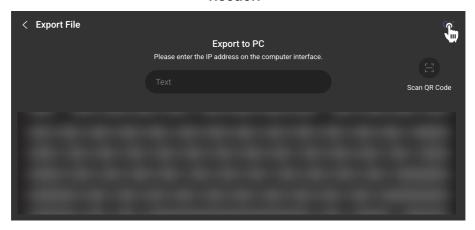


(3) After a successful connection, the device will automatically compress the data and transmit it to the PC.

The compressed file format is PHA, and the file can be opened directly with JMStudio.

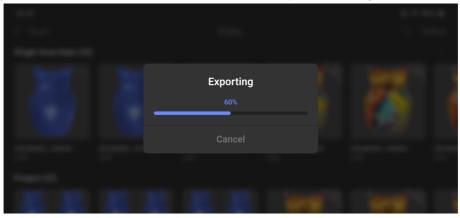




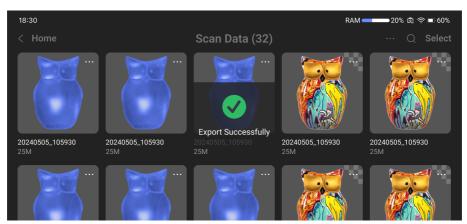



* Description of data imported on the PC

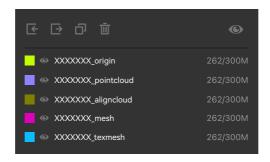

_origin: Original point cloud data

_pointcloud: Single-frame point cloud, data edited on the device

_aligncloud: Point cloud data generated through the alignment function


_mesh: Mesh data obtained by merging point cloud data on the device (without texture mapping)

_texmesh: Mesh data obtained by merging point cloud data on the device (with texture mapping)

P40 Calibration


Toucan can be recalibrated, but if not necessary, please do not recalibrate it. It'll involve far and near mode calibration, and each calibration requires five scans.

1 Enter the calibration interface in settings.

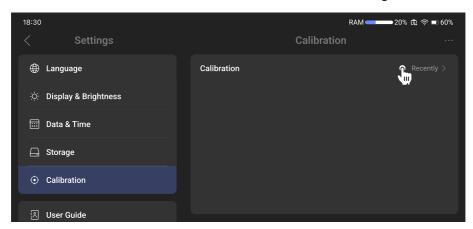

② Follow the instructions on the left, place the calibraion board accordingly(move it leftward or rightward, forward or backward), and collect the data from the calibration board.

After scanning in near mode, the system will automatically switch into far mode scanning. Please pay attention to the progress indicators on the left. During scanning, ensure the scanner center is aligned with the center of the calibration board, and reduce the brightness setting to a proper level. Placing the calibration board against a black background will make scanning easier.

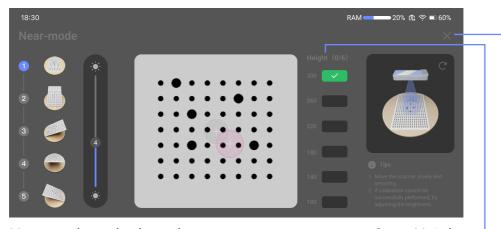


How to place the board

Near Mode / Far Mode Switch into near mode, place the board in the five different ways and scan it in turn. After it's completed, it'll switch into far mode automatically. Scan Height


Follow the instructions on the screen, and scan the board in all mentioned heights one by one.

Exit Calibration




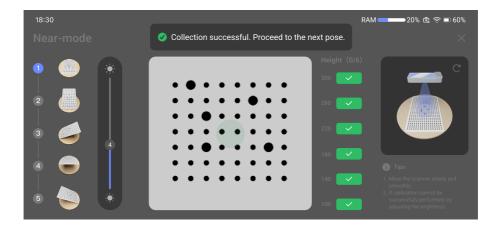



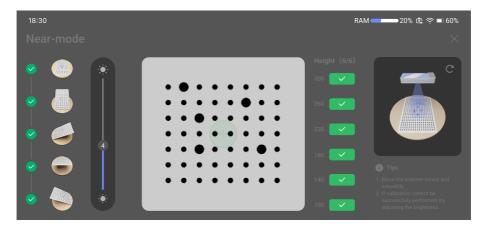


3 Similar to the scanning operation in near mode, perform another 5 scans in far mode.

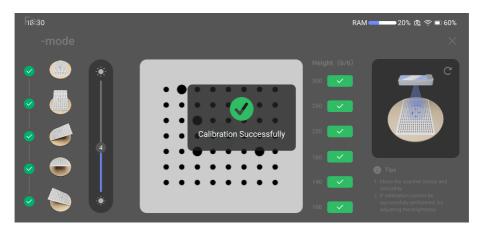



* TOUCAN has a built-in calibration file inside. You can reset it to factory settings.

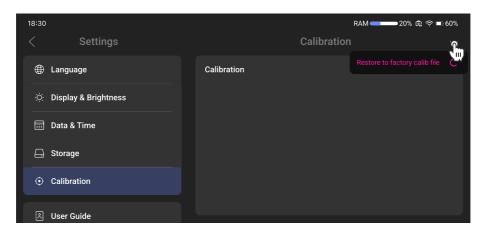

P43 Restart & Shut Down

Press the power button at the bottom of the device to choose restart or shutdown, or long-press for 6 seconds to force the device to shut down.

